
LED Outdoor Wash Light 80X20W RGBW 4in1 LED

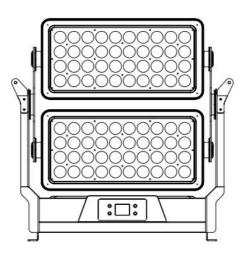

USER MANUAL

Thank you very much for choosing our product. For safety purpose, please read this manual carefully before your operation. This manual included installation and using information. Please install and operate it according to this manual.

Part 1 PRDUCT

1.1 Product introduction

This product is designed for indoor/outdoor use. Suitable applications include wash or effect lighting for architectural, stage or nightclub applications. This product can also be installed for use in signage and advertising using the dynamic functions available with DMX512 control. Direct input of DMX512 signal allows the units to be controlled from any DMX512 controller. This product can be operated as a single unit or in multiple units for large applications.

1.2 Technical Specifications

Voltage: AC100-240V, 50/60Hz **Power:** 1600W Light Source: 80X20W RGBW 4in1 LED IP Rating: IP65 Lifespan: around 100,000 hours Housing: Die-casting aluminum, powder-coated finish Control: DMX 512, 4/8/11CH Control Mode: DMX, Auto, Master/Slave mode **Dimmer: 0-100%** Strobe: 0-20Hz Beam angle: 25° (15° /45° /60° optional) Display: LCD color display with 4 touch buttons Power Connection: Local plug to Sectronic Powerkon IP65 **Power Input:** Sectronic Powerkon IP65 Power Output: Seetronic Powerkon IP65 Data Connectors: Seetronic 3-pin or 5-pin IP65 XLR Cable Length (power/DMX): 1.5 m Dimensions:641X123X644mm N.W 29KG

1.3 Safety Warning

IMPORTANT:

ALWAYS READ THE USER MANUAL BEFORE OPERATION. PLEASE CONFIRM THAT THE POWER SUPPLY STATED ON THE PRODUCT IS THE SAME AS THE MAINS POWER SUPPLY IN YOUR AREA.

- This product must be installed by a qualified professional.
- Always operate the equipment as described in the user manual.
- A minimum distance of 0.5m must be maintained between the equipment and combustible surface.

- The product must always be placed in a well ventilated area.
- Always make sure that the equipment is installed securely.
- DO NOT stand close to the equipment and stare directly into the LED light source.
- Always disconnect the power supply before attempting and maintenance.
- Always make sure that the supporting structure is solid and can support the combined weight of the products.
- The earth wire must always be connected to the ground.
- Do not touch the power cables if your hands are wet.

ATTENTION:

- This product left the place of manufacture in perfect condition. In order to maintain this condition and for safe operation, the user must always follow the instructions and safety warnings described in this user manual.
- Avoid shaking or strong impacts to any part of the equipment.
- Make sure that all parts of the equipment are kept clean and free of dust.
- Always make sure that the power connections are connected correct and secure.
- If there is any malfunction of the equipment, contact your distributor immediately.
- When transferring the product, it is advisable to use the original packaging in which the product left the factory.
- Shields, lenses or ultraviolet screens shall be changed if they have become damaged to such an extent that their effectiveness is impaired.
- The lamp (LED) shall be changed if it has become damaged or thermally deformed.

PART 2 INSTALLATION

Mounting:

2.1 Hanging


The product can be mounted in a hanging position using the supporting bracket. The bracket should be secured to the mounting truss or structure using a standard mounting clamp. Please note that when hanging the unit a safety cable should also be used

2.2 Upright

The product can be mounted in an upright or sitting position using the supporting brackets. **NOTE:**

The product can be mounted at any angle and in any position. It is possible to further adjust the angle of the product using the two adjustment knobs located on the side of the fixture.

PART 3 Product Size

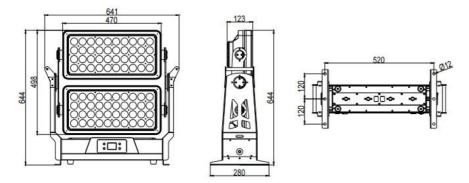

PART 4 Display Panel Operation

4.1 Display panel menu instruction





[MENU] menu selection or return to previous menu.



[ENTER] confirm current function setting.



[UP] press [UP] through the menu list to increase/change the value of the current function.

[DOWN] press [DOWN] through the menu list to decrease/change the value of the current function.

4.2 Display Menu instruction (general)

| 4.2 Display Menu instruction (general) | | | | |
|--|------------------|----------------|-----------------------|--|
| | DMX Address | 1 - 509 (4ch) | | |
| | | 1 - 498 (15ch) | | |
| | | 1 - 481 (32ch) | | |
| | DMX | 4CH | | |
| | Channel | 8CH | | |
| | Mode | 11CH | | |
| | | | Takes all traits to O | |
| | | Blackout | when DMX signal is | |
| DMX | | | lost or interrupted. | |
| SETTINGS | | | Holds all traits at | |
| 02111100 | No DMX Status | | last | |
| | | Hold | received value when | |
| | | | DMX signal is lost or | |
| | | | interrupted. | |
| | | | Defaults to values | |
| | | Manual | set | |
| | | | in Manual Mode when | |
| | | | DMX signal is lost or | |
| | | | interrupted. | |
| | Dim Modes | Standard | | |
| | | Stage | | |
| PERSONAL ITY | | TV | | |
| | | Architectural | | |
| | | Theatre | | |
| | | Stage 2 | | |
| | Dimmer | Linear | | |

| | Curve | Square | |
|-----------------|----------------------|----------------------|--------------|
| | | Inv. Sq. | |
| | | S-Curve | |
| | | Display Backlight | Off - 2 min |
| | Display | Display Lock | Off - 10 min |
| | | Display Invert | No / Yes |
| | | Language | English/中文 |
| | Temperat ure Unit | °C/°F | |
| | | Low | |
| | Fan Speed | High | |
| | | Auto | |
| | Red | 000 - 255 | |
| | Green | 000 - 255 | |
| | Outer Blue | 000 - 255 | |
| | white | 000 - 255 | |
| | Dimmer | 000 - 255 | |
| | Strobe Effect | 000 - 255 | |
| | Strobe Rate | 000 - 255 | |
| | Strobe Duration | 000 - 255 | |
| FIXTURE TEST | All Test | | |
| FIXTURE | Fixture Us | se Hour | |
| INFO | LED Use | Total LED Hour | |

| | Hour | LED On Hour | |
|-------|-----------|-----------------|-------------------|
| | | LED Hours Reset | |
| | Temperat | | |
| | ure | | |
| | Fan State | | |
| | RDM UID | XXXXXX | |
| | | Fixture Errors | LED Fan Error |
| | Error | | Temperature Error |
| | Logs | Reset Error | No / Yes |
| | | Log(Passcode = | NO / Tes |
| | | 011) | |
| | Firmware | | |
| | Version | X. XX | |
| RESET | All Reset | No/Yes | |

PART 5 DMX Channel Instruction

| 4 CH | Data | Control function | Instruction |
|------|-------|------------------|-------------|
| 1 | 0-255 | 0~100% | Red |
| 2 | 0-255 | 0~100% | Green |
| 3 | 0-255 | 0~100% | Blue |
| 4 | 0-255 | 0~100% | White |

| 8 CH | Data | Control function | Instruction |
|------|-----------|------------------|-------------------------------|
| 1 | 0-255 | 0-100% | Master dimming |
| | 0-002 | 0-100% | Stroboscope Open |
| | 003 - 005 | | Strobe |
| | 006 - 050 | | Ramp up |
| 2 | 051 - 100 | | Ramp down |
| | 101 - 150 | | Ramp up-down |
| | 151 - 200 | | Lightning |
| | 201 - 255 | | Random |
| 3 | 000 - 255 | | Strobe Rate, slow to fast |
| 4 | 000 - 255 | | Strobe Duration, slow to fast |
| 5 | 0-255 | 0~100% | Red |
| 6 | 0-255 | 0~100% | Green |
| 7 | 0-255 | 0~100% | Blue |
| 8 | 0-255 | 0~100% | White |

| 11 CH | Data | Control function | Instruction |
|-------|-----------|------------------|-------------------------------|
| 1 | 0-255 | 0-100% | Master dimming |
| | 0-002 | 0-100% | Stroboscope Open |
| | 003 - 005 | | Strobe |
| | 006 - 050 | | Ramp up |
| 2 | 051 - 100 | | Ramp down |
| | 101 - 150 | | Ramp up-down |
| | 151 - 200 | | Lightning |
| | 201 - 255 | | Random |
| 3 | 000 - 255 | | Strobe Rate, slow to fast |
| 4 | 000 - 255 | | Strobe Duration, slow to fast |
| 5 | 0-255 | 0~100% | Red |
| 6 | 0-255 | 0~100% | Green |
| 7 | 0-255 | 0~100% | Blue |
| 8 | 0-255 | 0~100% | White |
| 9 | 0-255 | | Colors |
| 10 | 0-255 | | Macro |
| 11 | 0-255 | | Speed |